SEMI-FLUSH
MOUNTING AND WIRING INSTRUCTIONS

WARNING: RISK OF FIRE, MOST DWELLINGS BUILT BEFORE 1985 HAVE SUPPLY WIRE RATED 60°C. CONSULT A QUALIFIED ELECTRICIAN BEFORE INSTALLING.

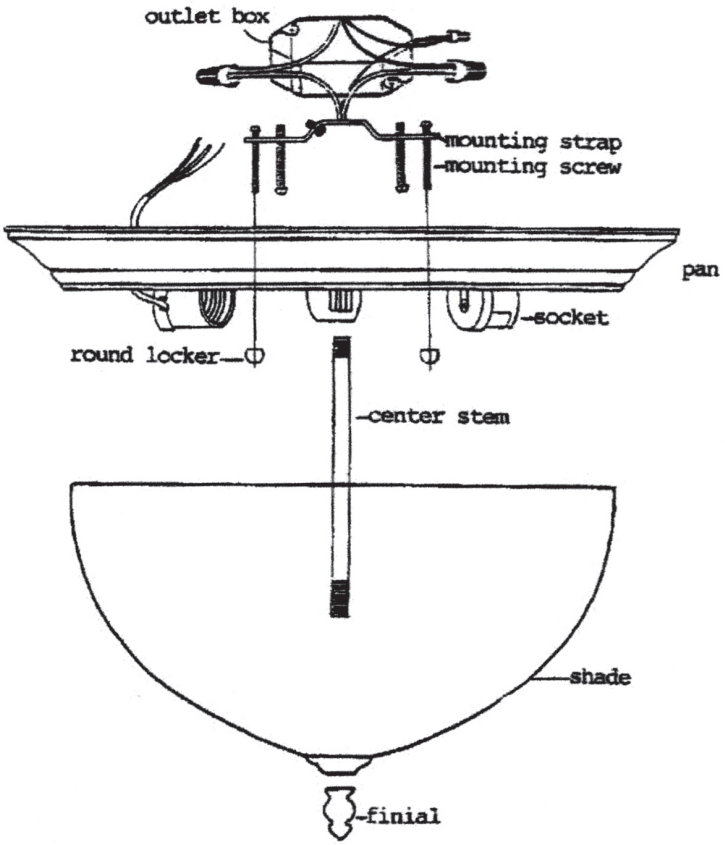

1) Run wire from center stem through hole in center of canopy Secure in place with lockwasher and hexnut.
2) Turn off power.
3) Assemble mounting screws to outlet box. (Screws not provided)
4) Attach mounting strap to outlet box. (Screws not provided)
5) Grounding instructions: (See Illus. A or B).
   A) On fixtures where mounting strap is provided with a hole and two raise dimples. Wrap ground wire from outlet box around green ground screw, and thread into hole.
   B) On fixtures where a cupped washer is provided. Attach ground wire from outlet box under cupped washer and green ground screw, and thread into mounting strap.

   If fixture is provided with ground wire. Connect fixture ground wire to outlet box ground wire with wire connector. (Not provided.) After following the above steps.

   Never connect ground wire to black or white power supply wires.

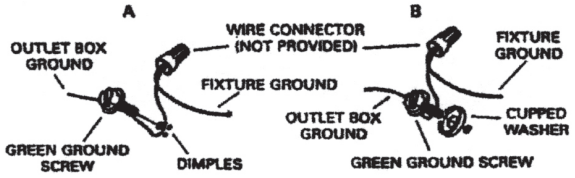

6) Make wire connections (connectors not provided.) Reference Chart below for correct connections and wire accordingly.

Connect Black or Red Supply Wire to:	Connect White Supply Wire to:
Black	White
*Parallel cord (round & smooth)	*Parallel cord (square & ridged)
Clear, Brown, Gold or Black without tracer	Clear, Brown, Gold or Black with tracer
Insulated wire (other than green) with copper conductor	Insulated wire (other than green) with silver conductor

Note: When parallel wire (SPT 1 & SPT II) is used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth. (See Illus.)

7) Push fixture to ceiling, carefully passing mounting screws through holes.
8) Secure fixture to ceiling with knurl knot.
9) Insert lamps and attach glass with trim (if provided) and finial.